

Operating Instructions

Thank you very much for choosing SLIK Pan head.

SLIK Corporation has designed your pan head to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Pan head's many fine features.

Retain this operating instruction in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.


Specification

SH-736HD


Height	104mm (4 1/8")
Weight	0.6kg (1lbs 6oz)
Camera mounting screw	U1/4
Tripod mounting screw	U1/4

M317



Components

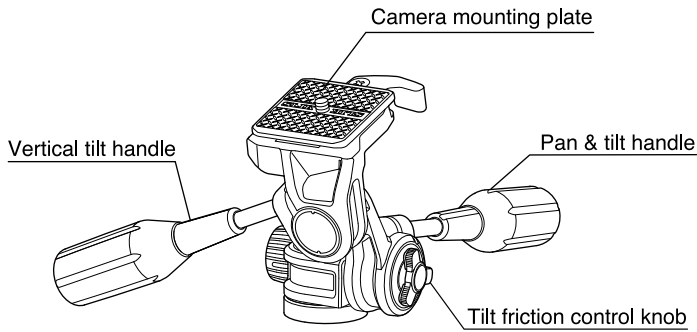

Camera mounting screw

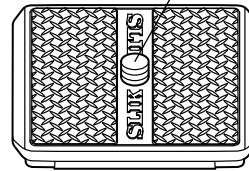


Mounting wing nut

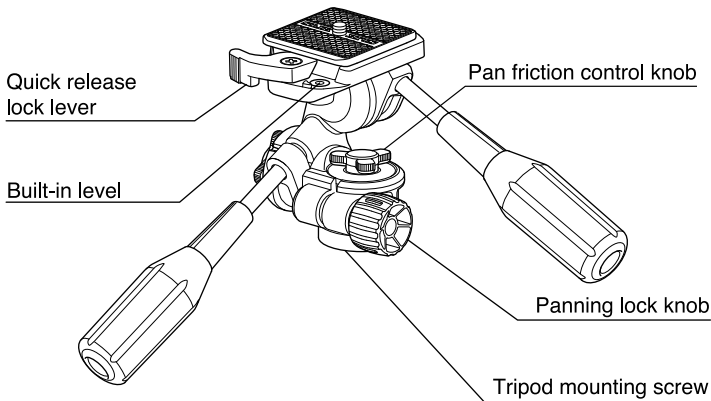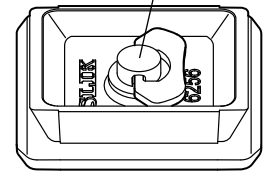

Carrying the tripod

🚫 Prohibition

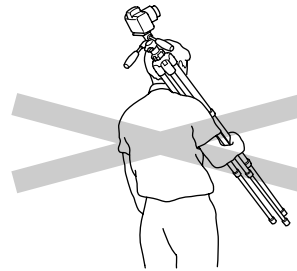

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.

Equipment that can be loaded on this pan head

🚫 Prohibition


⚠ Caution

This product has been designed to handle an equipment weighing under 5 kg (11 lbs). Do not overload.

The friction control system is valid for an equipment weighing under 2 kg (4.4 lbs).


Some equipment weighing under 5 kg, such as a long lens, may not be balanced well due to its weight distribution. In such case, please choose a larger pan head.

Install the panhandle

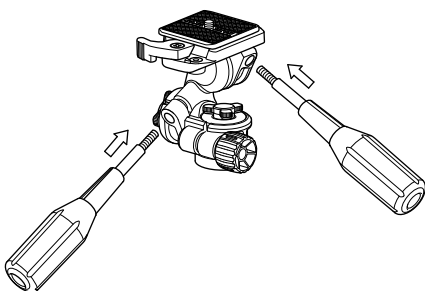


Panhandle are installed as shown. There is not difference in length between the panhandle, and screw into the back of the pan & tilt handle. Panhandle is installed in both side.

Storage

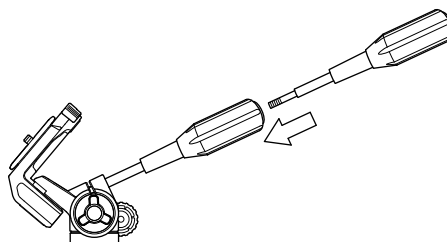


Remove the vertical tilt handle from the panhead, and screw into the back of the pan & tilt handle.

Built-in level

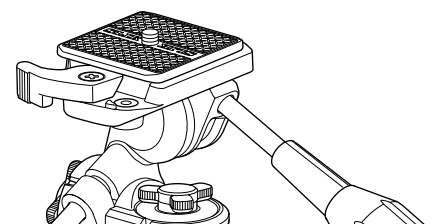


Adjust the built-in level to fit into the middle.

Attaching the camera to the quick release platform

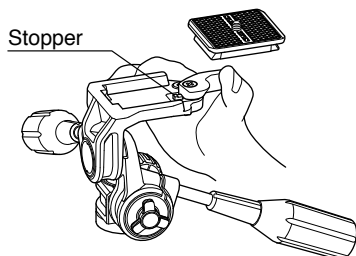


Remove the quick release platform turning the lock lever. In this case, please do not put the lock lever back by force as it has been stood by the stopper.

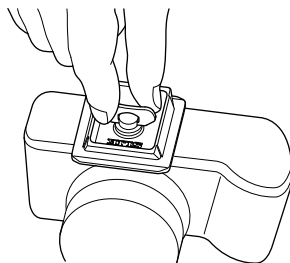


Align the length of the platform along the base of the camera body, and securely tighten the mounting wing nut.

⚠ Caution

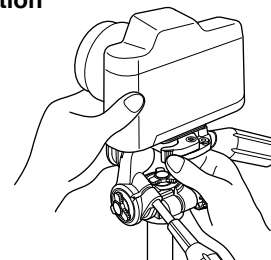


When you fix this quick release platform to pan head, the quick release lock lever will return to the original position automatically. We, however, recommend you to tighten this lever more to secure the fixing.

Using the pan head

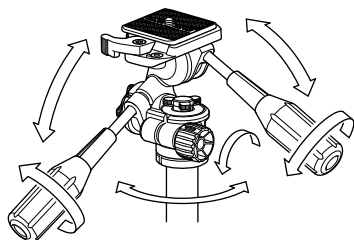

Loosen the pan & tilt handle, and the head will tilt back and forth. Loosen the panning lock knob, and the head will rotate along the horizontal direction. Loosen the vertical tilt handle, and the level can be adjusted.

How to shoot a movie

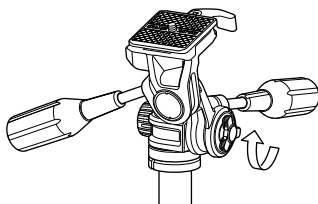


When tilt friction control knob is locked and pan handle is loosened, a friction of the vertical movement is increased. When pan friction control knob is locked and pan handle is loosened, a friction of the horizontal movement is increased.

If the pan handle loosened too much, it doesn't allow you smooth movements.


Pan and tilt friction can be adjusted depends on an equipment or your favor, it is also suitable for a movie shooting. An adjustment range of friction control knobs are one whole turn.

⚠ Caution

The friction control knob is just for adjusting the frictions. When you are away from the tripod with your camera on, make sure to lock by the pan handle and the pan stopper.

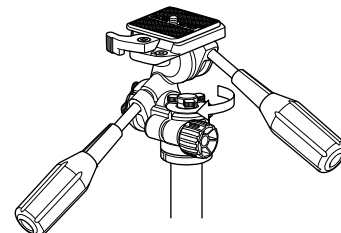


Removing the pan head from the center column

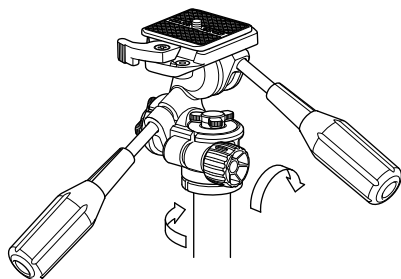

Use the following instructions if you wish to change to another heads, or attach accessories. First, lock the panning lock knob, then grasp the pan, or vertical tilt handle and turn the head, counter-clockwise to loosen.

Setting the pan head from the center column

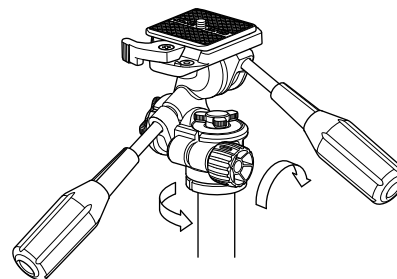

Set the new head, or accessory on the tripod's threaded post, and turn clockwise until it comes to a stop. Tighten the panning lock knob and turn clockwise slightly more.

Care of the Tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION

853 Kayama, Hidaka City, Saitama 350-1231 Japan Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2010

Printed in Thailand.