

SLIDING ARM II

Operating Instructions

Thank you very much for choosing SLIK SLIDING ARM II. The SLIK Corporation has designed your tripod to be a sturdy, rugged and dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of your Tripod's many fine features. Retain this operating instruction sheet in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition

 
 
This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification

Length	497 mm (19.55")
Height	102 mm (4")
Slide stroke	370 mm (14.55")
Weight	530 g (1.17 oz)
Tripod mounting screw	U1/4"
Head attachment screw	U1/4"

Q627

Components

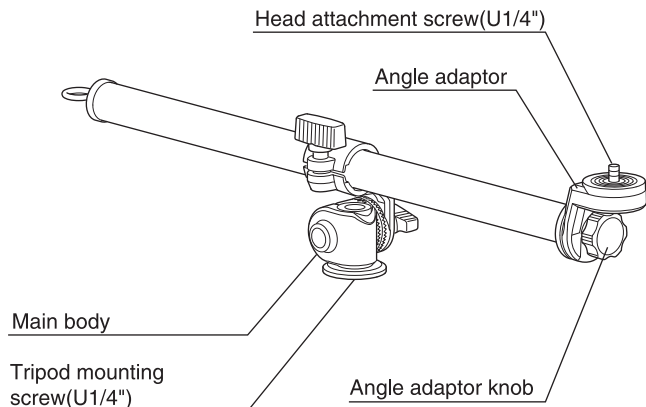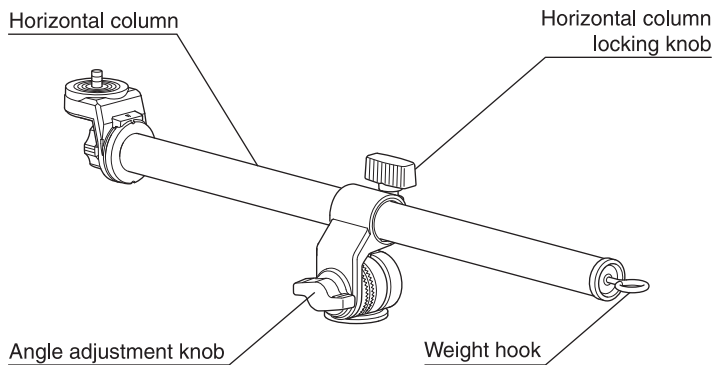

※Removing a double screw adaptor to make a big screw.


Equipment that can be used with this pan head

🚫 Prohibition

This product has been designed to handle equipment weighing under 2 kgs (4.41 lbs). Do not overload. Some equipments weighing under 2 kgs (4.41 lbs), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger tripod.

Carrying the tripod


🚫 Prohibition

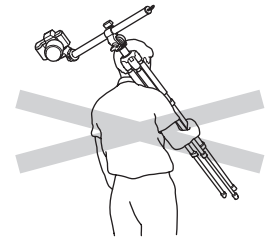

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.

Setting up

⚠ Caution

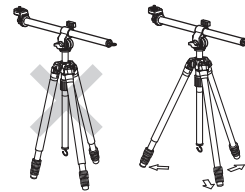

To prevent accidental equipment fall or tripod tipping over, making sure all levers, knobs and handles on the tripod are securely tightened. And all of the three legs are opened all the way.


Caution

⚠ Caution

A tripod can be tipped over easily depending on the balance of the equipments. Always make sure to be well balanced and hold a camera while adjusting the Horizontal column.


Pan head mounting screw

🚫 Prohibition

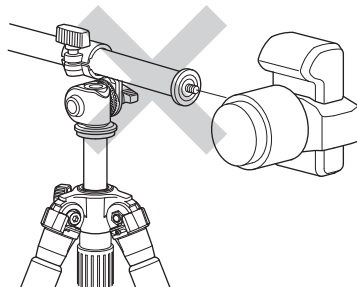

Do not attach a camera directly to the attachment screw of the Horizontal column. This may damage both of your camera and the Horizontal column.


Attaching to a tripod

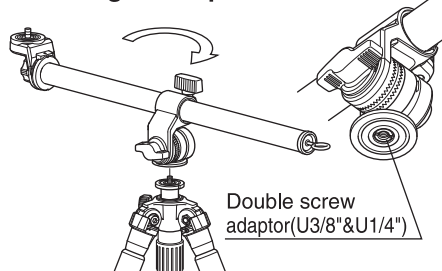

Double screw adaptor(U3/8" & U1/4")

Screw into a head mounting screw on a tripod. The Tripod mounting screw can be converted from U1/4" to U3/8" to remove U1/4" adaptor with a coin etc from the thread


Attaching a head

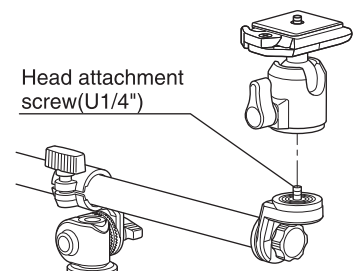

Head attachment screw(U1/4")


Screw a head into the Head attachment screw firmly. Also refer to an instruction with the head if possible.

Remove the Angle adaptor

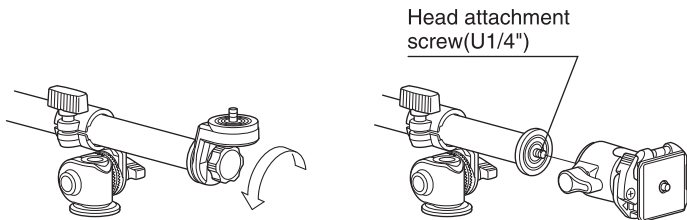

Turn the Angle adaptor knob counter-clockwise to remove the Angle adaptor. U1/4" screw is present on the top of the Horizontal column. A head can be mounted directly on the Horizontal column.


Attaching the Angle adaptor

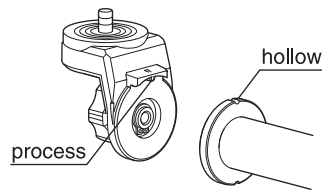

Match the hollow on the Horizontal column and the process on the Angle adaptor. Then turn the Angle adaptor knob clockwise.


Using the Horizontal column locking knob

Caution

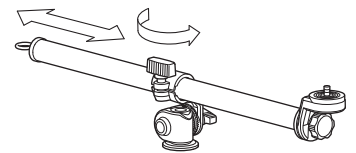


Turn the Horizontal column locking knob counter-clockwise for adjusting the Horizontal column. Fix the Horizontal column firmly when the angle is determined. Make sure to hold your camera while adjusting the Horizontal column.

Caution

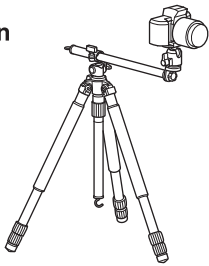


A tripod can be tipped over easily when the Horizontal column stretched to one direction. One of the tripod legs must set the same direction as the direction of the Horizontal column.

Prohibition

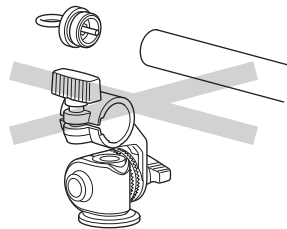

Do not disassemble this product. Consult your local dealer if it is disassembled.


Caution

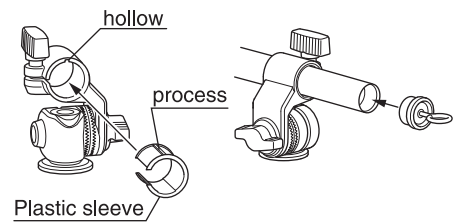

In case the plastic sleeve comes out, follow a procedure below.
1. Match the hollow on the Main body and the process on the plastic sleeve.
2. To make sure to put the Weight ring when the Horizontal column is inserted.

Using the Angle adjustment knob


Caution

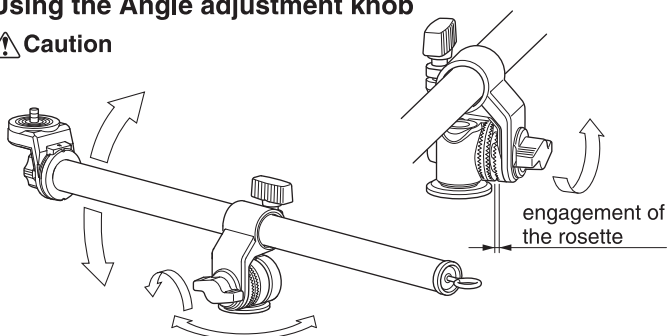

Loosening the Angle adjustment knob allows to adjust vertical and horizontal position.

Make sure to disengage the rosette fully while adjusting the position and to tighten the Angle adjustment knob firmly once the position is determined. Also make sure to hold your camera while adjusting the position.

Using the Weight hook

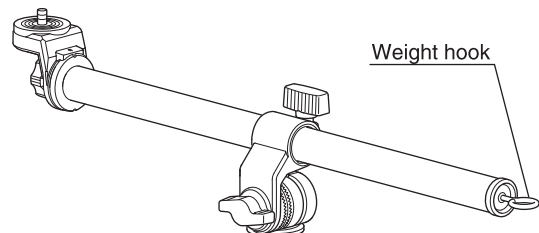

A tripod can be tipped over easily depending on the balance of the equipments. Adding weight on the Weight ring may increase a stability of the tripod system.

Care of the tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION

853 Kayama, Hidaka City, Saitama 350-1231 Japan ©2013