

SMH-250

Operating Instructions

Thank you very much for choosing SLIK product.

Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of the product's many fine features.

Retain these operating instructions in case you might want to refer back to them.

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

O Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

T309

Specification

Height (main body)

Width (1.5 in) 88 mm (3.5 in)

Depth 46 mm (1.9 in)

Weight (include wedge) 250 g (0.56 lbs)

Camera Screw U1/4"
Tripod Mounting Screw U1/4"
Height Adjustment Angle


20° (±10°)


Azimuth Adjustment Angle


16° (±8°)

37 mm

Parts description

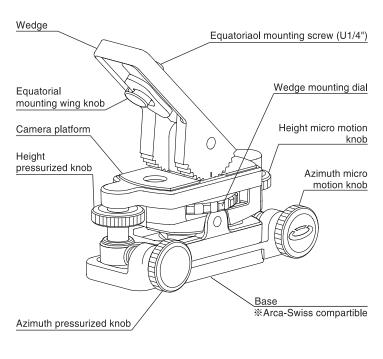


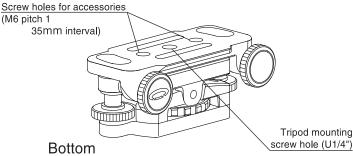

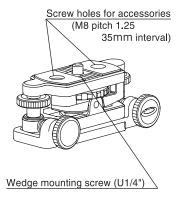

Wedge removed

Carrying the tripod O Prohibition

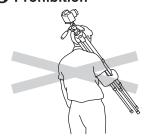

Remove camera and other equipment from the tripod while transporting. Camera or other equipment may fall from the tripod and cause bodily injuly or property damage.

Equipment to be mount

 
O Prohibition

Max. load capacity: 6kg

DO NOT load more than its load capacity. Also, it may be difficult to balance the equipment due to its position of center of gravity even below the load capacity. Tripod must have enough load capacity. The center of gravity may be greatly shifted depending on the equipment used. To correct the center of gravity of the equipment, adjust mounting position of the camera platform and slide mounting position of the wedge.

Setting up

⚠ Caution




To prevent accidental equipment fall or tripod tipping over, making sure all levers, knobs and handles on the unit are securely tightened.

Also, spread tripod legs as wide as possible for a solid foundation.

Insufficient leg spread may cause camera shake and the tripod to fall over.

Installation (mounting on the tripod)

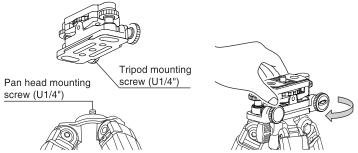


When using the unit with a field scope, attach the unit derectly to the tripod or to the pan head according to your usage.

When mounting the unit directly to the tripod, rotate the unit clockwise until it comes to stop.

When mounting the unit to the portable equatorial mount, place the unit derectly to the tripod.


(mounting on the pan head)

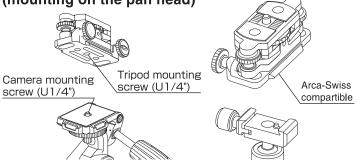


Insert pan head attachment screw of the pan head to the tripod mounting screw hole of the unit and firmly fix the unit.

Although the unit base is Arca-Swiss compartible, the unit may not mount to all Arca-Swiss compartible pan head.

How to use micro motion knobs

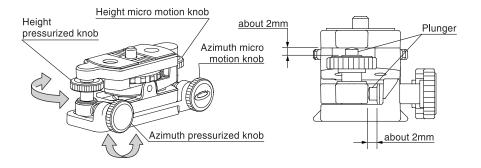


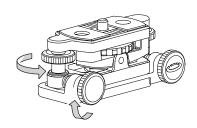

Adjust the protrusion of each plunger about 2mm, by rotating both height and azimuth pressurizing knobs. When plunger comes out from the pressurizing screw, the micro motion knobs can be operated. In case of fine adjustment range is wide, adjust both the pressurizing knob until plunger retracts.


To lock the angle of the platform, rotate the pressurizing knob until plunger retracts.

Rotate the pressurizing knob until it comes to stop. Do not overturn the knob.

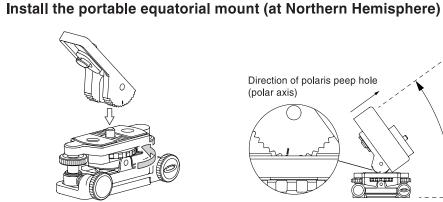

Rotate wedge mounting dial to mount the wedge to the main body.

Engage the grooves of the main body and the wedge.

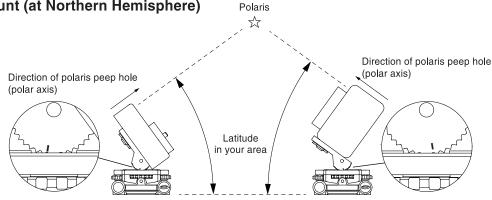


The indicator can be a good reference mark for easy and quick wedge angle setting.

It is good to know beforehand how many steps need to be shifted from 45 deg. to achieve nearest wedge angle to the latitude of your area.

The indicator is carved at 45 deg. position relative to the mounting surface of the wedge.

And the angle of the wedge can be adjusted by 9 deg. increments. Adjudt the angle of the wedge to match the latitude of your area.

Install the field scope

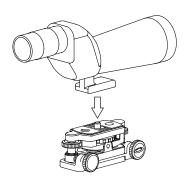


Insert wedge mounting screw to the screw to the screw hole of the field scope and rotate the wedge mounting dial until it stop.

Center of gravity of the equipment

 Installation of astrophotography accessories





In this case, reverse the mounting direction or shift the center of gravity of the equipment.

Place the center of gravity to the side of the height micro motion knob.

⚠ Caution

There are two each accessory holes on both top and bottom of the unit. (refer to Parts description) Top screw holes are M8 pitch 1.25, and M6 pitch 1 for the bottom.

Both screw holes are 35mm interval.

In case of installing a third-party accessory, the lengh of the screw to the pan head should be as follows.

M8 : less than 7mm M6 : less than 6mm

Care of the product

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.