

### Operating Instructions

Thank you very much for choosing SLIK Carbon Fiber tripod.

SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Tripod's many fine features.

Retain this operating instruction in case you might want to refer back to it.

#### ⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

#### 🚫 Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

### Specification



PRO CF-933	
Folded length	740mm (29.2 in)
Max. operating height	2,040mm (80.3 in)
Max. center column ext.	380mm (14.9 in)
Weight	2,440g (5.38 lbs)

PRO CF-934	
Folded length	590mm (23.3 in)
Max. operating height	1,870mm (73.6 in)
Max. center column ext.	325mm (12.7 in)
Weight	2,360g (5.21 lbs)

With exclusive case

V507

### Components

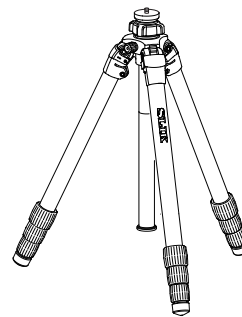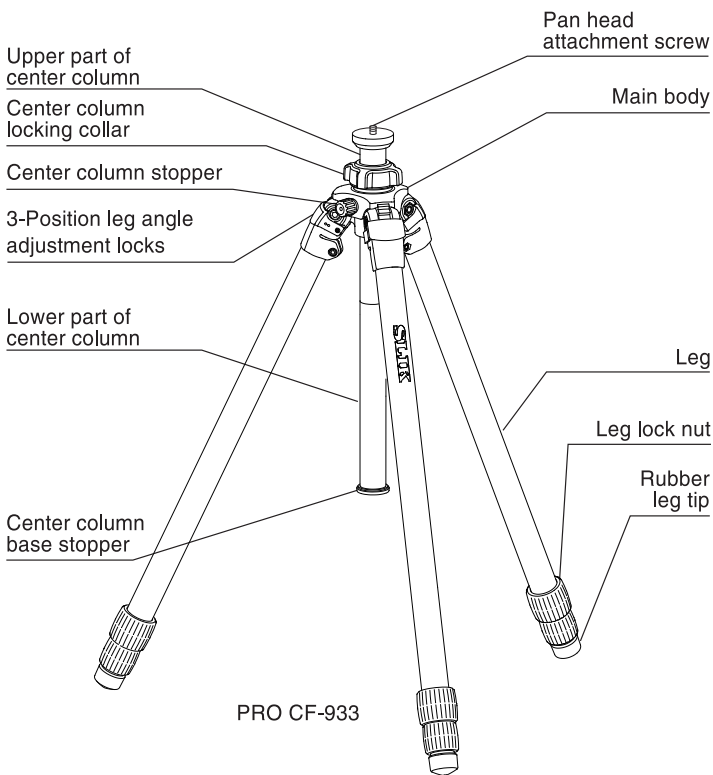

PRO CF-934

### Equipment that can be loaded on this tripod

#### 🚫 Prohibition


This product has been designed to handle equipment weighing under 10 kgs (22 lbs). Do not overload.

Some equipment weighing under 10 kgs (22 lbs), such as long lenses, may not balance well due to its weight distribution.

In such case, please use a larger tripod.


### Optional accessory

SPIKE SET U3/8"  
Cat. NO.618-411

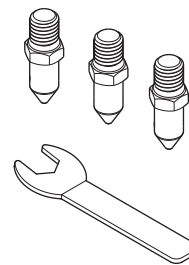

### Pan head attachment screw

#### 🚫 Prohibition

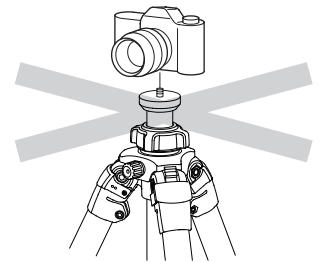


Do not attach a camera directly to the Pan head attachment screw of the center column.

This may damage both your camera and tripod.


### Accessory

Allen Wrench

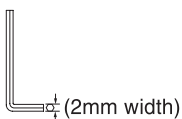

### Carrying the tripod

#### 🚫 Prohibition

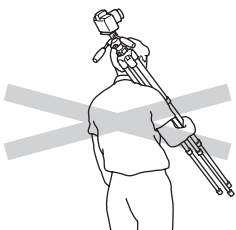

Carrying a tripod with a camera left on can result in unexpected accidents. We, therefore, recommend that you remove your camera while carrying the tripod.


### In case of the shock given to tripod by force

#### ⚠ Caution

When the shock has been given to the tripod and legs such as falling down, please check for cracks, flaws, etc. on the pipes. When you find some cracks, flaws, etc. on the pipes, discontinue use and contact customer support. When damaged it is possible that carbon fibers will splinter from the pipes. In that case, please do not touch it.

### Clamp head


#### 🚫 Prohibition

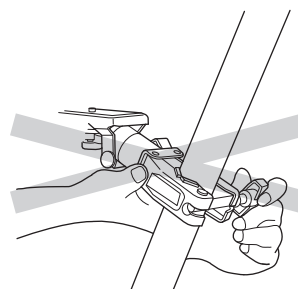

Please do not use an optional clamp head for a carbon fiber tripod. The pipe may be damaged.


### Setting up

#### ⚠ Caution

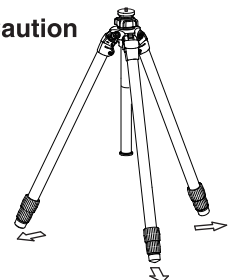


To prevent accidental equipment fall or tripod tipping over, making sure all levers, knobs and handles on the tripod are securely tightened. And all three legs are opened completely.

## Extending the tripod legs

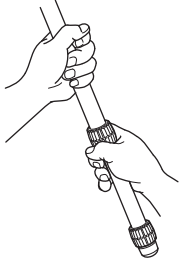


When you extend the legs, please proceed from the upper section. When you fold the legs, please proceed from the lower section. It will be steady to grip the upper part of pipe just above the lock nut.

### ⊘ Prohibition

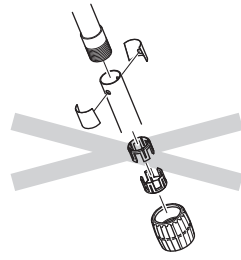


Do not remove the leg lock nut and inner parts. It will cause tripod malfunction or result in missing parts. In case the leg unit is disassembled, please refer to the figure above to reassemble the parts correctly.

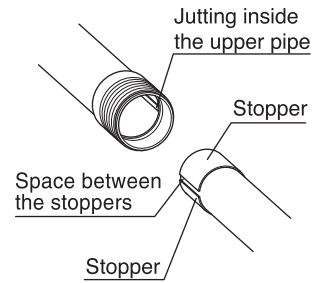


Match the space between the stoppers and jutting inside the upper pipe when the pipe is connecting. If you are not able to reassemble the unit correctly, please ask store where you purchased or contact customer service. (Not covered by free repair warranty.)

## Three position adjustable legs

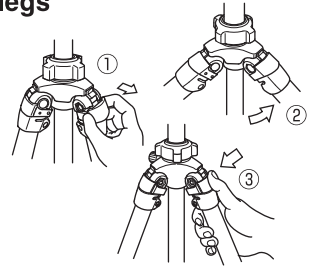

To change the angle of each leg, close the leg slightly, and then pull the leg angle adjustment lock out. There is a choice of two other angle positions. After choosing the desired leg angle, securely push in the adjustment lock.


## How to use the center column

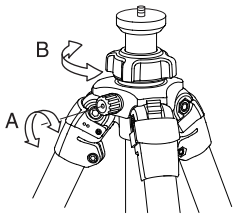

A - Screw-type  
Center column stopper is used to lock or unlock center column.  
B - Twist-type  
Center column locking collar is used to adjust a tension of the movement. The both of A and B must be locked for fixing center column.

## Inverting the center column


### ⚠ Caution

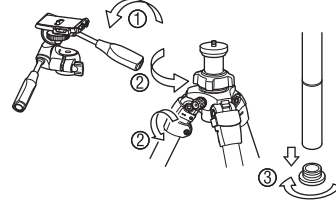

- 1 Remove the pan head when inverting or replacing the center column.
- 2 Loosen the center column locking collar and the center column stopper.
- 3 Remove the center column base stopper turning to the direction of arrow, and then pull out the center column.


### ⚠ Caution

Center column base stopper must be attached.

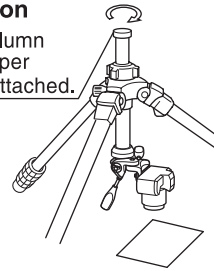


Insert the center column from the lower side of main body, and tighten the center column locking collar and the center column stopper. Make sure to re-attach the center column base stopper in order to prevent the center column from falling out accidentally.

### ⊘ Prohibition

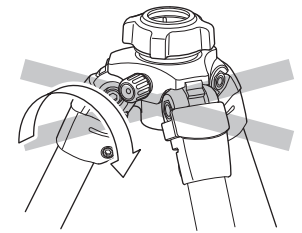


Please do not turn the center column stopper without a center column. The internal parts may be damaged.

## How to get low position shots

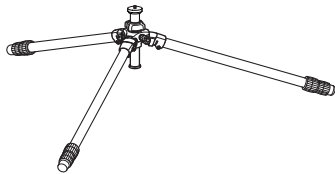


You can get lower height as shown in the picture.

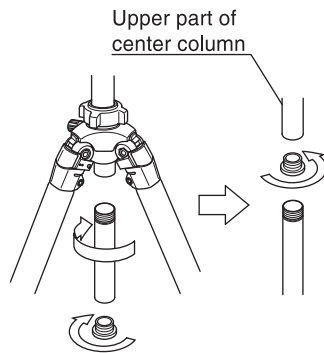


Remove the center column base stopper, and then remove the lower part of center column. Put the center column base stopper in to the upper part of center column.

## How to change the pan head fixing screw

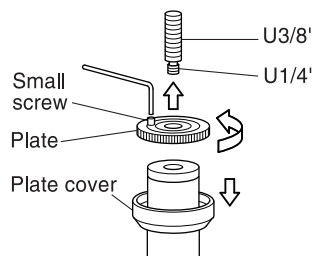


- The pan head fixing screw is reversible for either large thread (U3/8") or small thread (U1/4").
- 1 Move the plate cover down.
  - 2 Loosen the small screw in about three turnings with an allen wrench (2 mm width).
  - 3 Loosen the plate without removing the small screw.

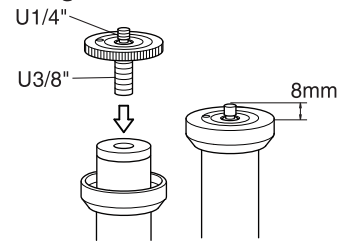

- 4 Loosen the head fixing screw and pull it out.
- 5 Then screw it in again after reversing the top and the bottom.
- 6 Adjust the height of screw in approx. 8mm above the plate. Then tighten the small screw by an allen wrench. Put the plate cover back.


## How to change the leg tips

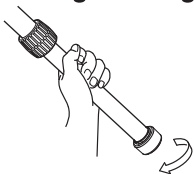

The leg tips can be converted to the spike leg tips. To remove the rubber leg tips, hold the leg pipe tightly and loosen the rubber leg tip.

### ⊘ Prohibition


If you hold the leg pipe other than the lowest part, the leg pipe may be damaged. Always use the attached wrench for the conversion. The pipe may be damaged.

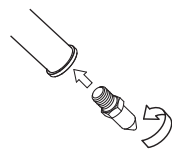

Screw the spike leg tip into the leg pipe by finger tips until it comes stop. Then the spike leg tip must be further tightened with the included wrench. Always use the attached wrench for replacement to avoid pipe damage.

## Care of the Tripod

DO NOT apply any grease or oil to this product. Clean with a mild detergent and a soft cloth only. DO NOT use close to flame. Avoid extreme heat.

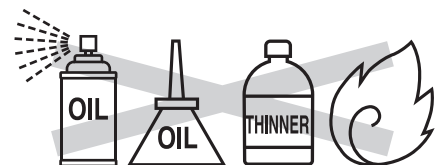

Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.