

SLIK® SVH-520

Operating Instructions

Thank you very much for choosing SLIK product. SLIK Corporation designs products to be a sturdy, rugged, and dependable, and that will provide you with many years of satisfactory use. Please take a few moments to read this operating instruction manual carefully before use to take full advantage of the many fine features. Retain this operating instruction manual in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition

This prohibition icon refers to information pertaining to prohibited contents. Please refer to instruction closely to avoid accidents.


Specification

Height	100 mm (4 in)
Weight	565 g (1.25 lbs)
Camera mounting screw	U1/4"
Tripod mounting screw	U1/4" &/or U3/8"


W527

Components

Quick shoe

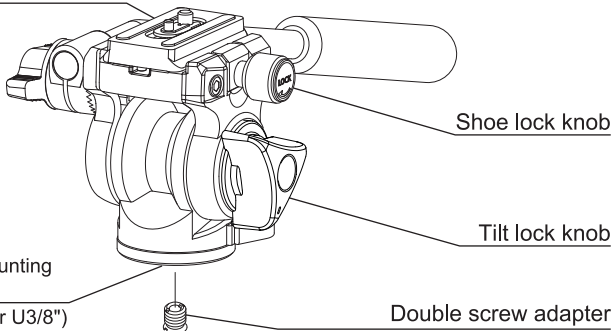

Tripod mounting screw
(U1/4" &/or U3/8")

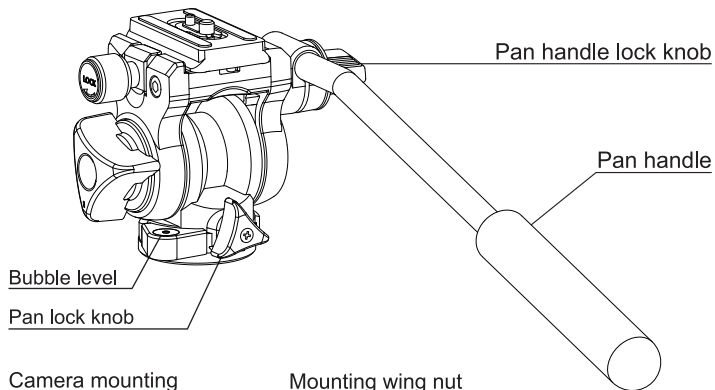

Bubble level
Pan lock knob

Camera mounting screw (U1/4")

Mounting wing nut

Accessory

Anti-rotation pin
(Removable)


(Back side)

Anti-rotation pin adapter

※Bubble level on the tripod offers approximate leveling of the tripod. It is not accurate as a level feature on most cameras.

Equipment that can be loaded on this product


🚫 Prohibition

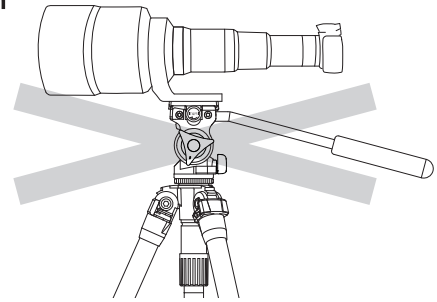

This product has been designed to handle equipment weighing under 4 kgs (8.81 lbs). Do not overload. Some equipment weighing under 4 kgs (8.81 lbs), such as long lenses, may not balance well due to unequal weight distribution. In such cases, please use a larger pan head.

Carrying the tripod


🚫 Prohibition

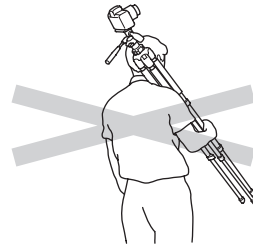

Carrying a tripod with a camera attached can result in unexpected accidents. We therefore recommend removing your camera while carrying your tripod.


Setting up

⚠ Caution

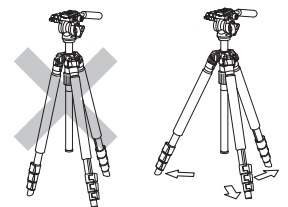


To prevent accidental equipment falls or tripod tipping over, make sure all levers, knobs and handles on the tripod are securely tightened and all three tripod legs are opened completely.

Attaching the pan head to the center column

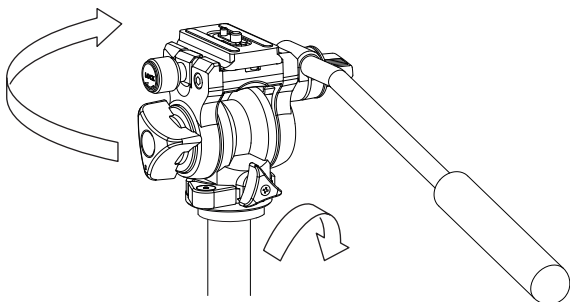


Attach the head to your tripod's threaded post, and turn clockwise until it comes to a stop. Tighten the pan lock knob and continue turning the head clockwise for more a secure fit.

Removing the pan head from the center column

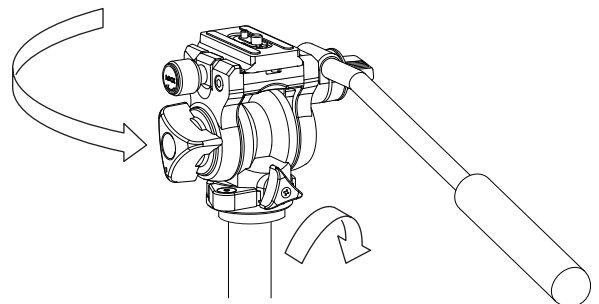


First, lock the pan lock knob, then grasp the pan handle and turn the head, counter-clockwise to loosen.

About anti-rotation pin adapter

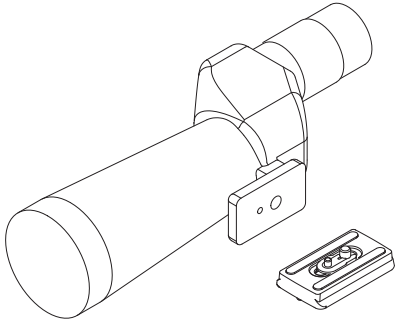

When your equipment has an anti-rotation pin mounting hole, match the locating pin to the hole and tighten the camera mounting screw.

⚠ Caution

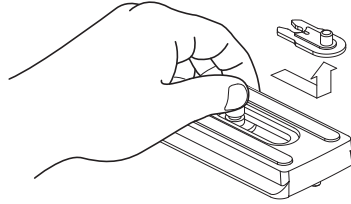


If you are using an equipment that does not have an anti-rotation pin mounting hole, please follow the steps below to remove the anti-rotation pin adapter

①: While holding down the camera mounting screw, push the anti-rotation pin adapter away from the mounting screw to remove it.

⚠ Be careful not to pinch your fingers or hurt your nails when removing the anti-rotation pin adapter.


⚠ Caution

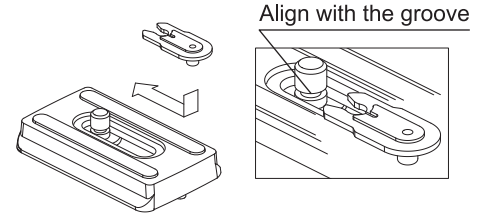


②: Turn the anti-rotation pin adapter upside down and align it with the groove of the camera mounting screw.

⚠ Be careful not to pinch your fingers or hurt your nails when removing the anti-rotation pin adapter. A spare anti-rotation pin adapter is included in case you lose the primary one.

Attaching the camera to the quick release shoe

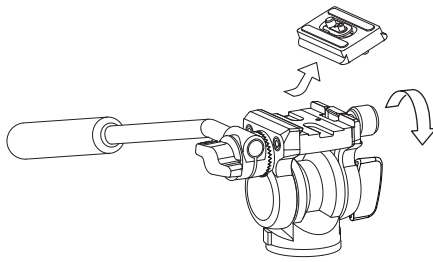


Remove the quick release shoe to loosen the shoe lock knob until the quick release shoe can be removed from the platform.

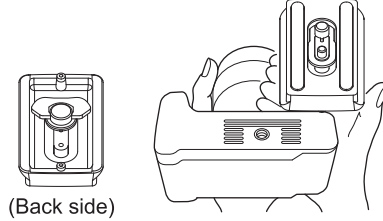


Screw the camera mounting screw on the tripod attachment screw of your camera and fix firmly.

⚠ Caution

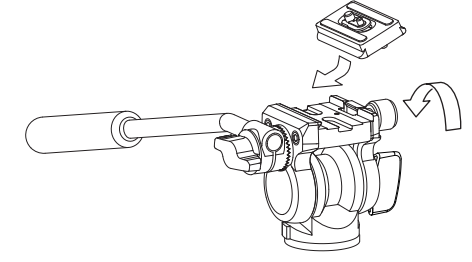


Fix the shoe lock knob firmly after inserting the quick release shoe to the platform. Please make sure the equipment is securely fixed to the pan head, before you use the pan head.


Using the pan head

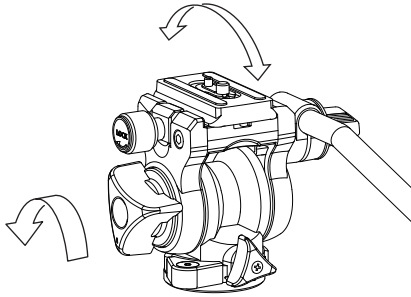

Loosen the tilt lock knob, and the head will tilt back and forth.

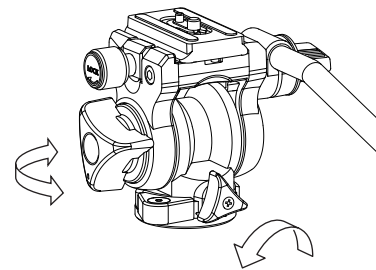


Loosen the pan lock knob, and the head will rotate horizontally.

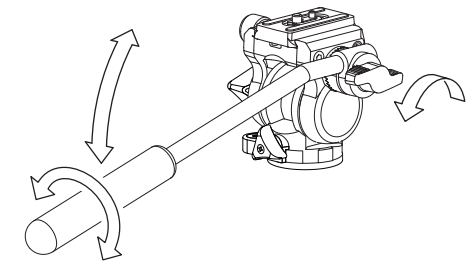

Loosen the pan handle lock knob to adjust the pan handle to the desired position. After you change the pan handle position, lock the pan handle lock knob firmly.


Bubble level

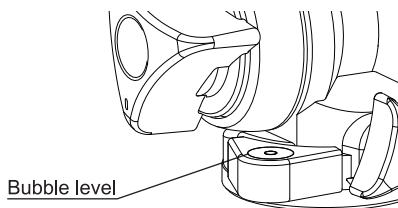

Adjust the level so that the bubble is inside of the marked circle.

Care of the product

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use the unit close to flame. Avoid extreme heat.

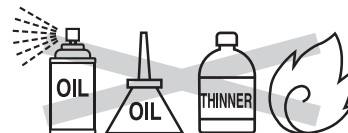

SLIK Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.