

Extending the tripod legs



Prohibition






Extend the legs from the upper section, and fold the legs from the lower section. It is steady to grip the upper part of pipe just above the lock nut when the leg is extended or folded.


Do not remove the nut and take out pieces. If it has been removed, insert the pieces as per the above specification.

Match the space between the stoppers and jutting inside the upper pipe when the pipe is connecting.

Operating the center column

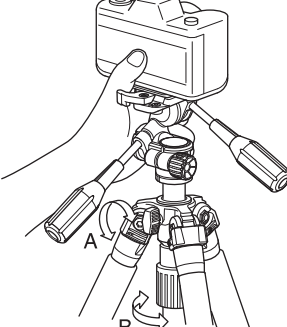


A - Screw-type
Center column stopper is used to lock or unlock center column.
B - Twist-type
Center column locking nut is used to adjust a tension of the movement.
The both of A and B must be locked for fixing center column.

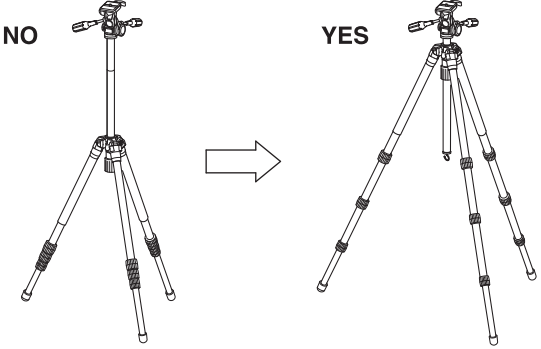


NO → YES

To avoid unnecessary camera vibrations, keep the center column height to a minimum. Also use the larger legs first when extending the legs.

How to get low position shots

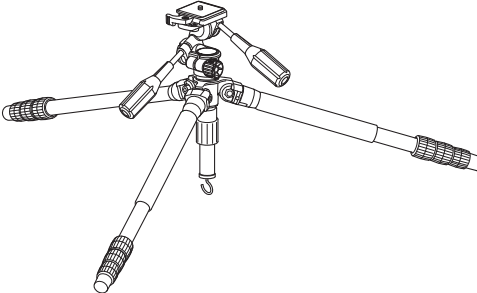


You can get lower height.

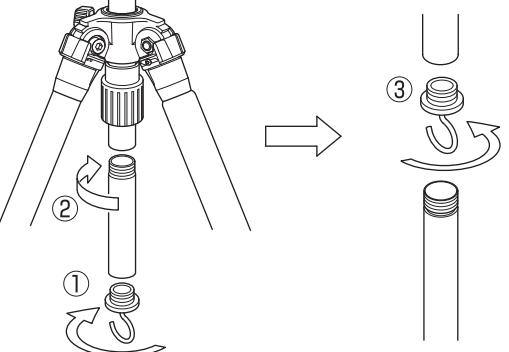

1.Remove the center column base stopper.
2.Remove the lower part of center column.
3.Put the center column base stopper on the upper part of center column end.

How to change the leg tips



The leg tips can be converted to the spike leg tips. (sold separately) To remove the rubber leg tip, hold the leg pipe tightly and loosen the rubber leg tip.


Prohibition

If you hold the leg pipe other than the lowest part, the leg pipe may be damaged. Always use the attached wrench for the conversion. The pipe may be damaged.

Screw the spike leg tip into the leg pipe by finger tips until it comes stop. Then the spike leg tip must be tightened up with the wrench (comes with SPIKE SET).

Care of the tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.

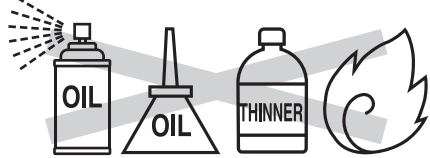

Slik Corporation reserves the right to make changes in design and/or mprovements on the products without any obligation and ad vanced notice.

SLIK®

PRO 724DX Tripod

Operating Instructions

Thank you very much for choosing the SLIK PRO 724DX Tripod. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use. Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of your Tripod's many fine features. Retain this operating instruction sheet in case you might want to refer back to it.

Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

Prohibition


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification

Folded length	555mm (21.9in)
Max. operating height	1,740mm (68.4in)
Max. center column ext.	325mm (12.7in)
Weight	2,000g (4.5lbs)

With exclusive case

Components

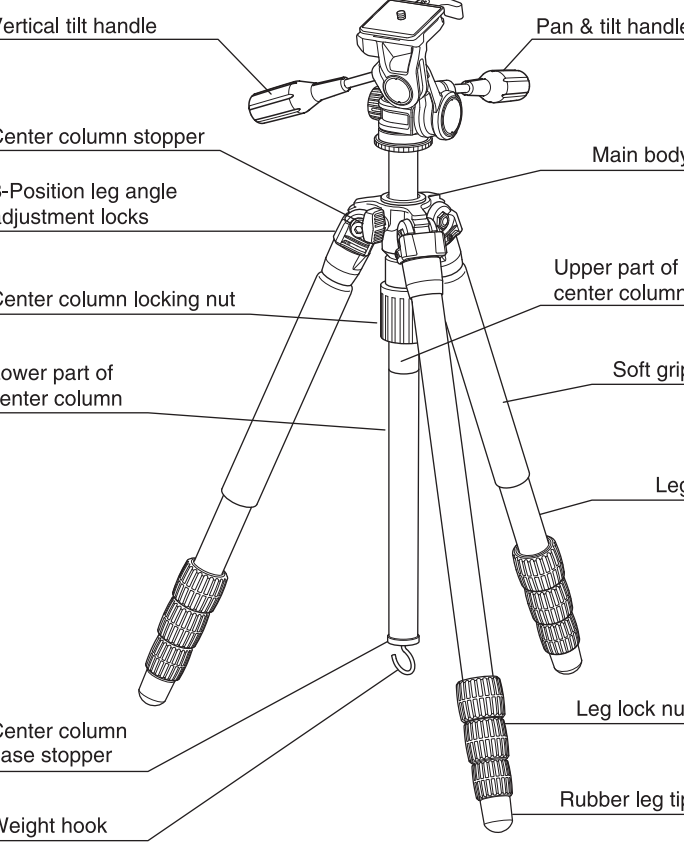

Vertical tilt handle

Center column stopper

3-Position leg angle adjustment locks

Center column locking nut

Lower part of center column

Center column base stopper

Weight hook

Pan & tilt handle

Main body

Upper part of center column

Soft grip


Leg

Leg lock nut

Rubber leg tip

Carrying the tripod


Prohibition

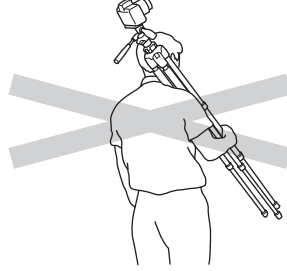

Carrying a tripod with a camera left on can result in unexpected accidents. We, therefore, recommend you to remove your camera while carrying the tripod.


Pan head mounting post

Prohibition

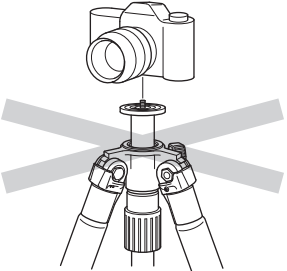

Do not attach a camera directly to the attachment screw of the center column. This may damage both your camera and tripod.

Pan head

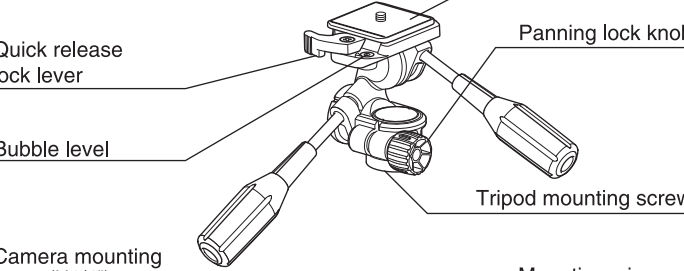

Quick release shoe

Panning lock knob

Quick release lock lever

Bubble level

Camera mounting screw(U1/4")

Mounting wing nut

(Right side)


(Back side)

Caution

※The bubble levels are a rough criterion. It is not accurate as a leveler on a camera.

Optional accessory

SPIKE SET
Cat. NO.618-410

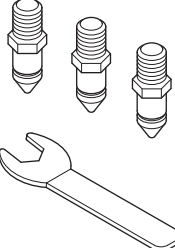


This product has been designed to handle equipment weighing under 5 kgs (11 lbs). Do not overload. Some equipments weighing under 5 kgs (11 lbs), such as long lenses, may not balance well due to its weight distribution. In such case, select a larger tripod.

Equipment that can be loaded on this tripod

In case of the shock given to tripod by force

 
Caution



When the shock has been given to the tripod and legs such as falling down, check well whether there are cracks, flaws, etc. on the pipes or not. When you find some cracks, flaws, etc. on the pipes, stop to use it and ask to repair. It may be wounded when some of fibers came out from the pipes. In that case do not touch it.


Clamp head

⊘ Prohibition

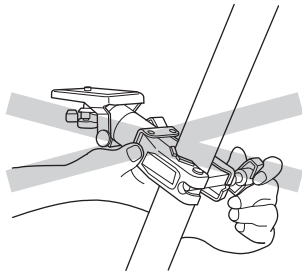


Do not use an optional Clamp head for a carbon fiber tripod. The pipe may be damaged.

 Install the panhandle

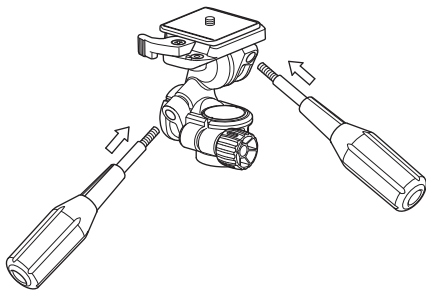


Panhandle are installed as shown. There is not difference in length between the panhandle. Panhandle is installed in both side.

 Storage

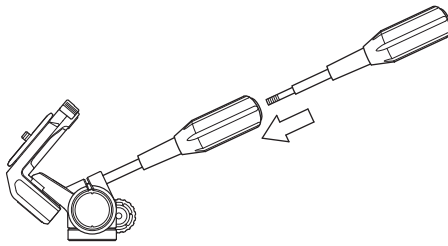


Remove the vertical tilt handle from the panhead, and screw into the back of the pan & tilt handle.

 How to change the panhead attachment screw

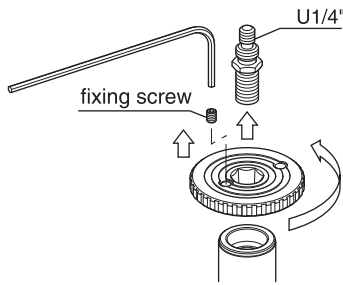


 To change the U3/8" screw, loosen the fixing screw with an allen wrench (2.5mm width) and rotate the center column plate to remove from the center column. Then push out the panhead attachment screw from the bottom.

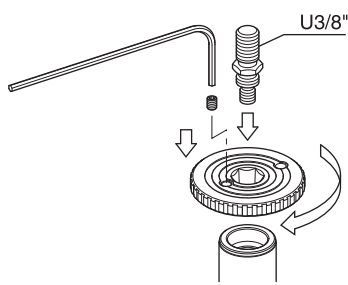


Flip the panhead attachment screw and put back to the center coumn plate. Screw in the center column plate and the panhead attachment screw. Tighten the fixing screw to avoid the rotating the center column plate while in use.

 Bubble level

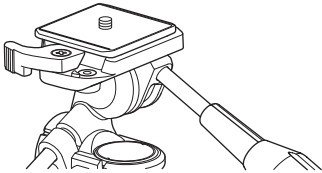


Adjust the bubble level to fit into the center.

 
Attaching the camera to the quick release shoe

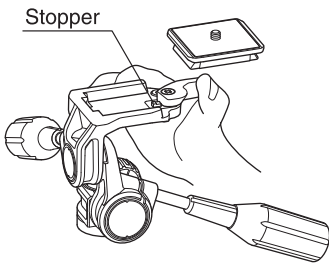

 Remove the quick release shoe turning the lock lever. In this case, please do not put the lock lever back by force as it has been stood by the stopper.

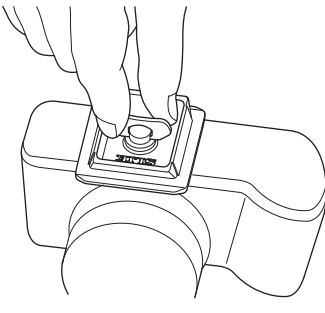


 Align the length of the quick release shoe along the base of the camera body, and securely tighten the mounting wing nut.

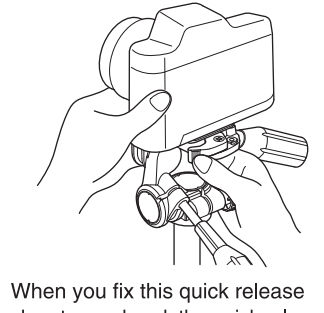


When you fix this quick release shoe to pan head, the quick release lock lever will return to the original position automatically. We, however, recommend you to tighten this lever more to secure the fixing.

 Three position adjustable legs

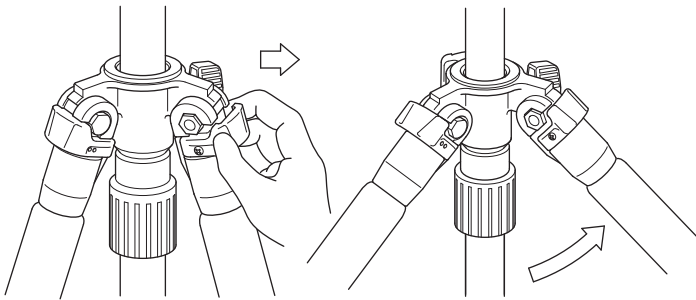


To change the angle of each leg, close the leg slightly, and then pull the leg angle adjustment lock out. There is a choice of two other angle positions.

 ⚠ Caution

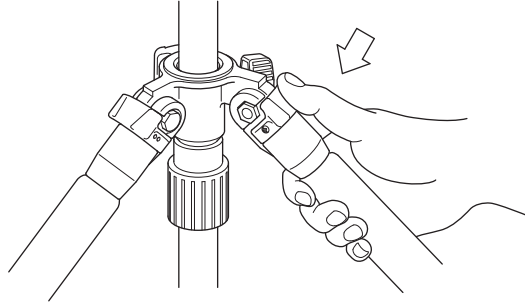


After choosing the desired leg angle, securely push in the adjustment lock.

 
Using the pan head

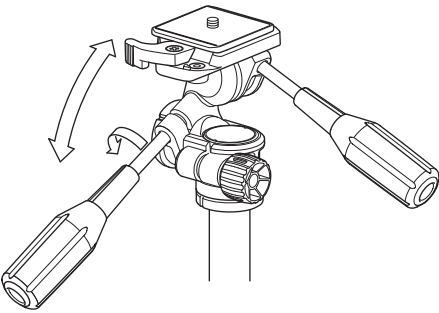

 Loosen the pan & tilt handle, and the head will tilt back and forth.

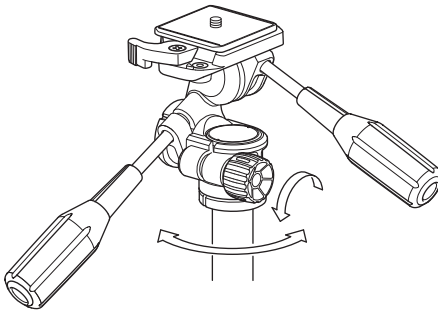

 
Loosen the panning lock knob, and the head will rotate along the horizontal direction.

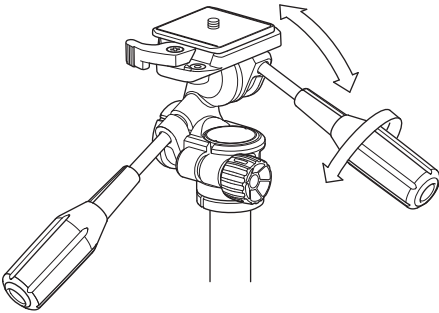


Loosen the vertical tilt handle, and the level can be adjusted.

Inverting the center column

 ⚠ Caution

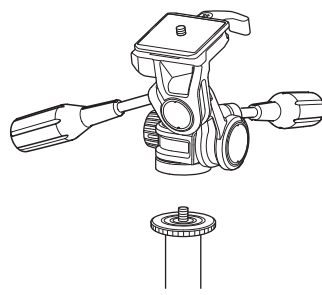


 Remove the pan head when inverting or replacing the center column.

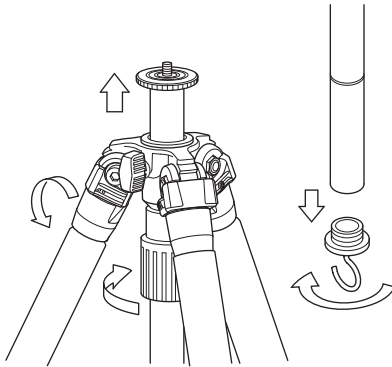


Remove the center column base stopper turning to the direction of arrow. Loosen the center column stopper and center column locking nut, then pull out the center column.

 Removing the pan head from the center column

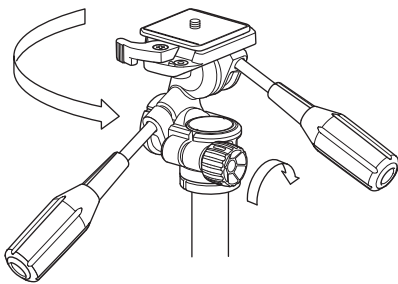


Use the following instructions if you wish to change to another heads, or attach accessories. First, lock the panning lock knob, then grasp the pan, or vertical tilt handle and turn the head, counter-clockwise to loosen.

 Setting the pan head from the center column

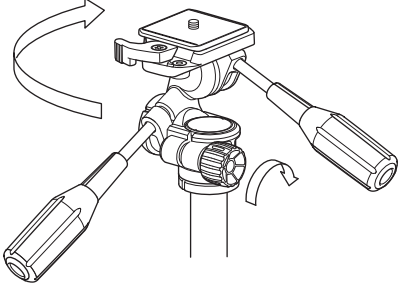


Set the new head, or accessory on the tripod's threaded post, and turn clockwise until it comes to a stop. Tighten the panning lock knob and turn clockwise slightly more.

 ⚠ Caution

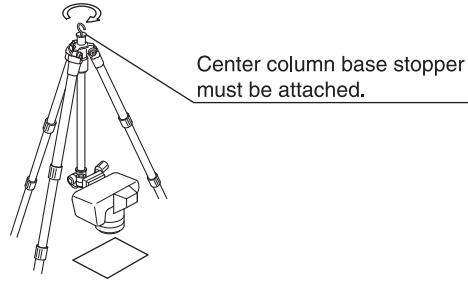

Insert the center column from the lower side of the main body, tighten the center column locking nut and the center column stopper. Make sure to re-attach the center column base stopper in order to prevent the center column falling out accidentally.

 ⊘ Prohibition

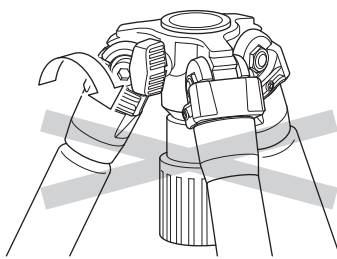

Please do not turn the center column stopper while a center column or optional short center column attached on. The internal parts may be damaged.