
Operating the center column

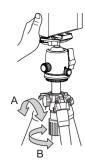


A - Screw-type

Center column stopper is used to lock or unlock center column.

Center column locking nut is used to adjust a tension of the movement. The both of A and B must be locked for fixing center column.


Low position

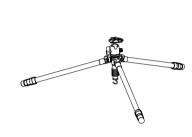

Remove the center column base stopper.

Then remove the lower part of center column

Put the center column base stopper in to the upper part of center column.

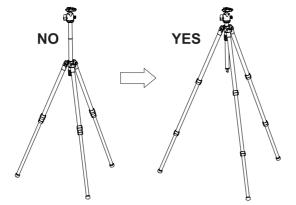

To avoid unnecessary camera vibrations, try to keep the center column height to a minimum.

Also use the larger legs first when extending the legs.

Inverting the center column

Caution



- 1)Remove the pan head.
- (2) Remove the center column base stopper turning to the direction of arrow
- 3Loosen the center column stopper and the center column locking nut. and then pull out the center column.

How to change the leg tips

⚠ Caution




Insert the center column from the lower side of main body. Tighten the center column locking nut and the center column stopper.

Make sure to re-attach the center column base stopper in order to prevent the center column from falling out accidentally.

○ Prohibition

You can get lower height.

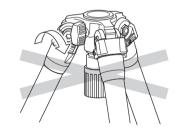

Do not turn the center column stopper while pulling out the center column. The internal parts may be damaged.

Optional Accessory

SPIKE SET Cat. NO.618-411



The leg tips can be converted to the spike leg tips. (sold separately) To remove the rubber leg tip, hold the leg pipe tightly and loosen the rubber leg tip.

Screw the spike leg tip into the leg pipe by finger tips until it comes stop. Then the spike leg tip must be tightened up with the wrench (comes with SPIKE SET).

○ Prohibition

If you hold the leg pipe other than the lowest part, the leg pipe may be damaged. Always use the attached wrench for the conversion. The pipe may be damaged.

Care of the product

- DO NOT apply any grease or oil to this product.
- · Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION

PRO CF-833BH6 , PRO CF-834BH6 PRO CF-733BH5 , PRO CF-734BH5

Operating Instructions

Thank you very much for choosing SLIK product, SLIK Corporation has designed to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use. Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of many fine features. Retain this operating instruction in case you might want to refer back to it,

. Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

○Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

3-position leg angle

PRO CF-833BH6

In case of the shock

♠ Caution

not touch it.

given to tripod by force

When the shock has been given to the tripods &/or legs such as falling down please check well whether there are cracks, flaws, etc. on the pipes, or not. When you find any cracks, flaws, etc. on the pipes, please stop to use it and

ask to repair. It may be wounded

when some of fibers came out from

the pipes. In that case, please do

adjustment lock

Specification

Folded length

Folded length

Folded length

Weight

Weight

Weight

PRO CF-833BH6 686mm(27.1 in) Max. operating height 1.812mm(71.3 in) 325mm(12.7 in) Max. center column ext 2,030g(4.48 lbs) PRO CF-834BH6

566mm(22.3 in) Max operating height 1.752mm(68.9 in) Max. center column ext. 325mm(12.7 in) 2,040g(4.50 lbs)

PRO CF-733BH5 657mm(25.9 in) Max. operating height 1 772mm(69 7 in) Max. center column ext. 355mm(13.9 in) 1,710g(3.77 lbs)

screw knob

PRO CF-734BH5 Folded length 557mm(22.0 in) Max. operating height 1 747mm(68.7 in) Max. center column ext. 325mm(12.7 in) 1,730g(3.82 lbs) Weight

With exclusive case

S118

Platform

Main body

Lower part of

center column

Center column base stopper

Weight hook

Leg lock nut

exchangeable

○ Prohibition

Lea tips

The hanging weight shall be a part

of the maximum loading capacity.

Pan head mounting post

Do not attach a camera directly to

This may damage both your camera


the pan head attachment screw.

and tripod.

Components

Center column stopper

Center column locking nut

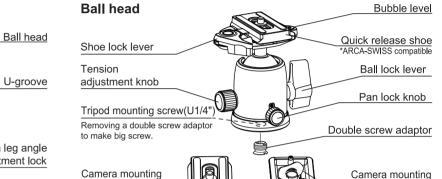

! Caution


screw(U1/4")

*Bubble level on the tripod head is a rough criterion.

It is not accurate as a leveler on a camera. PRO CF-834BH6

PRO CF-734BH5

Clamp head **⊘**Prohibition

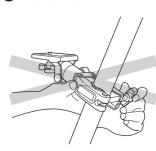

may be damaged.

Equipment that can be loaded on this product

Maximum loading capacity:

PRO CF-833BH6 :6kg


PRO CF-834BH6 :6kg

PRO CF-733BH5 :5kg

PRO CF-734BH5 :5kg


Do not exceed the specified loading capacity.

PRO CF-733BH5

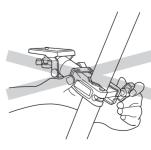

Do not use an optional Clamp head for a carbon fiber tripod. The pipe

Carrying the tripod ○ Prohibition

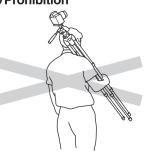

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore. recommend you to remove your camera while carrying the tripod.

853 Kayama, Hidaka City, Saitama 350-1231, Japan Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2018


Setting up **^**Caution

To prevent accidental equipment fall or tripod tipping over, making sure all levers, knobs and handles on the tripod are securely tightened. And all of the three legs are opened all the way.

Attaching the camera to the quick release shoe



Remove the quick release shoe. Do not put the lock lever back by force as it has been stood by the stopper.

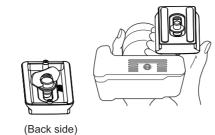

Screw the camera mounting screw on the tripod attachment screw of your camera and fix firmly.

⚠ Caution



To reattach the shoe, slide it in from the shoe lock lever side.

If it attaches, the shoe lock lever closes automatically. Push the lock lever more to make sure the camera shoe is locked completely.

Adjusting an angle




The platform can be moved freely while ball lock lever is loosened.

Tighten the ball lock lever when a camera angle is determined.



When the pan lock knob is loosened, the tripod head is rotated horizontally.

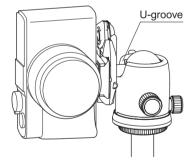


To set vertical camera position, place the platform into U-groove.




A friction is adjusted by the tension adjustment knob only when the ball lock lever is loosened.

⚠ Caution

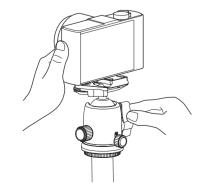

To loosen the ball lock lever with a camera on can result an unexpected fall. Hold a camera firmly until the ball lock lever is tightened.

Bubble level

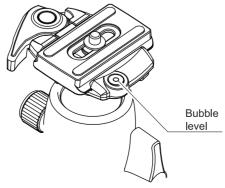

Adjust the bubble level to fit into center. The bubble level is a rough criterion. It is not accurate as a leveler on a camera.

Removing head from the center column




Tighten the ball lock lever and pan lock knob. Turn the head counter-clockwise to loosen.

How to attach a tripod




Tighten the ball lock lever and pan lock knob. When a tripod mounting screw is U3/8", screw in the double screw adaptor.

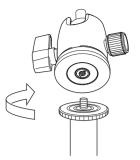


Fasten the ball lock lever and screw into a tripod mounting screw.

How to change the pan head attachment screw

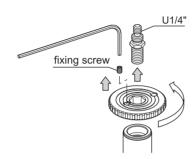


To change the U3/8" screw, loosen the fixing screw with an allen wrench (2.5mm width) and rotate the center column plate to remove from the center column. Then push out the pan head attachment screw from the bottom.

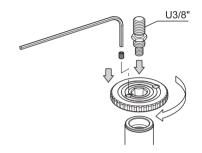

Flip the pan head attachment screw and put back to the center column plate. Screw in the center column plate and the pan head attachment screw. Tighten the fixing screw to avoid the rotating the center column plate while in use.


Three position adjustable legs

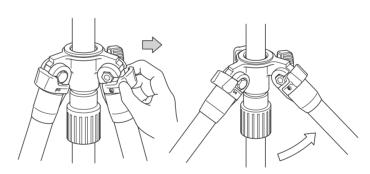

To change the angle of each leg, close the leg slightly, and then pull the leg angle adjustment lock out.

There is a choice of two other angle positions.

♠ Caution

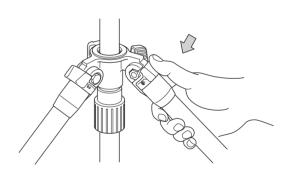

After choosing the desired leg angle, securely push in the adjustment lock.

Extending the tripod legs




When you extend the legs, please proceed from the upper section. When you fold the legs, please proceed from the lower section. It will be steady to grip the upper part of pipe just above the lock nut.



It is easier to extend the tripod legs if you turn the leg-tips to the foot, while leaving legs close.



Do not remove the nut and take out pieces. If it has been removed, insert the pieces as per the above specification.

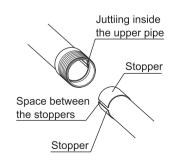

Match the space between the stoppers and jutting inside the upper pipe when the pipe is connecting.