 
 



Inverting the center column

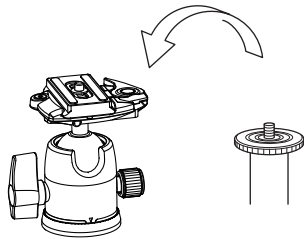

Always remove the pan head first before replacing the center column.

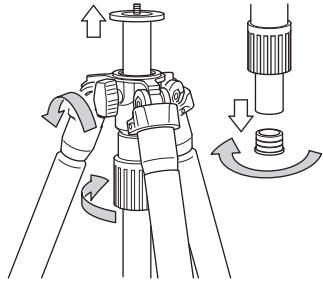


 Remove the center column base stopper from the bottom of the center column. Loosen the center column stopper and the locking nut , and then pull out the center column.

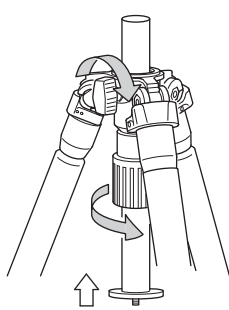


Insert the center column from lower side of main body, and tighten the locking nut and the center column stopper.

 
⚠ Caution

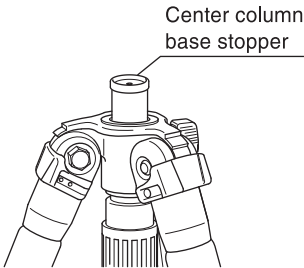

 Always be sure to return the center column base stopper back on the center column. This prevents the center column pulled out accidentally.

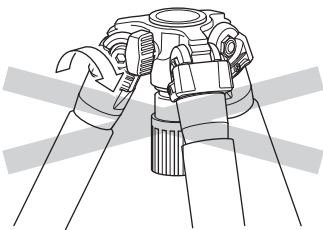


 Please do not turn the center column stopper without a center column &/or an optional short center column. The internal parts may be damaged.

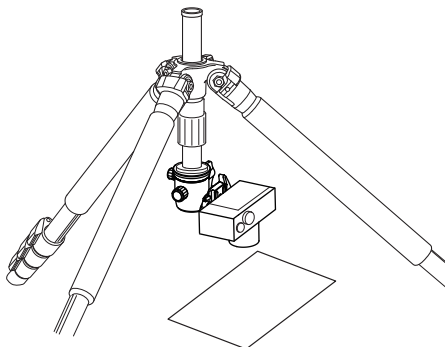


By inverting the center column, it is possible to do copy, and close up work.

 Changing the pan head attachment screw

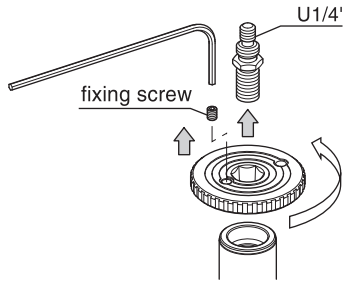

 
To change the U3/8" screw, loosen the fixing screw with an allen wrench (2.5mm width) and rotate the center column plate to remove from the center column. Then out the pan head attachment screw from the bottom.

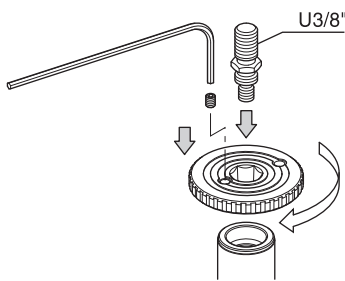

Flip the pan head attachment screw and put back to the center column plate. Screw in the center column plate and the pan head attachment screw. Tighten the fixing screw to avoid the rotating the center column plate while in use.

Care of the tripod

 - DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.

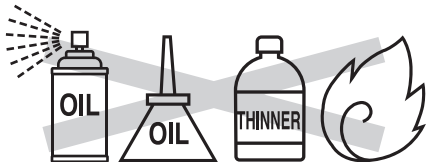

Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION  
853 Kayama, Hidaka City, Saitama 350-1231, Japan Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2018

SLIK®

PRO 340BH5

Operating Instructions

Thank you very much for choosing SLIK product. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use. Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of your Tripod's many fine features. Retain this operating instruction sheet in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.


Specification

PRO 340BH5	
Folded length	507mm (20 in)
Max. operating height	1,447mm (56.9 in)
Max. center column ext.	290mm (11.4 in)
Weight	1540g (3.41 lbs)

T571

With exclusive case

 Components

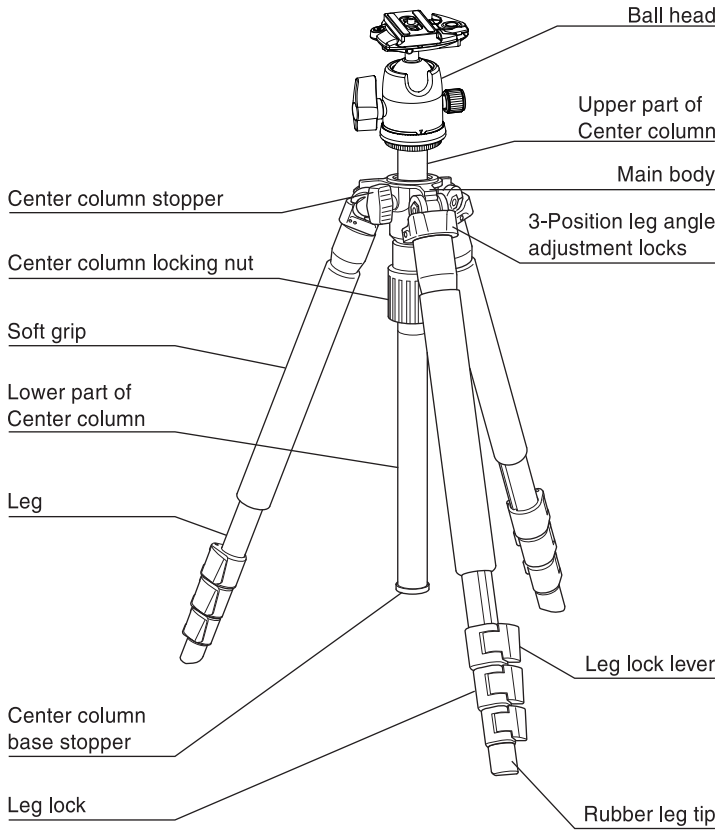


PRO 340BH5

⚠ Caution

- ※Soft grip is consumable. Replace when it is worn out.
- ※Color of the soft grip can be stained. Keep out from objects.

 Ball head

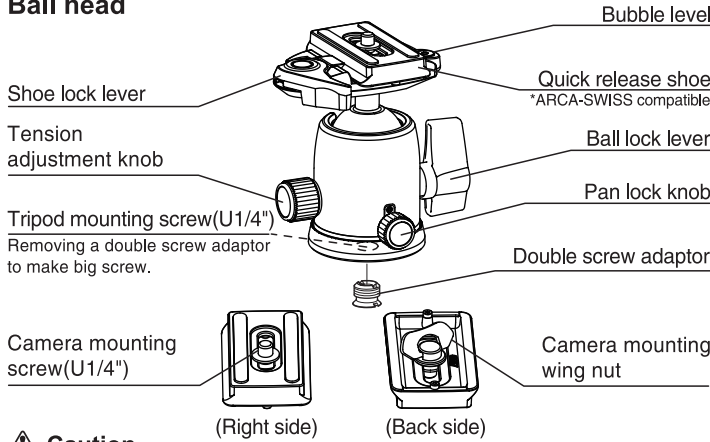

⚠ Caution

- ※Bubble level on the tripod head is a rough criterion. It is not accurate as a leveler on a camera.

Equipment that can be used with this tripod

 
🚫 Prohibition

Maximum loading capacity : 3 kgs (6.6 lbs)

Do not overload. This product has been designed to handle equipment weighing under the maximum loading capacity. Some equipments weighing under the maximum loading capacity may not balance well to its weight distribution. Use a larger equipment in such case.

Carrying the tripod


🚫 Prohibition

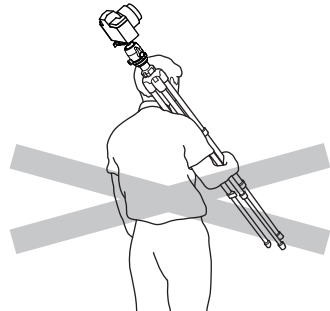

Carrying a tripod with a camera left on can result in unexpected accidents. We, therefore recommend you to remove your camera while you are carrying the tripod.

Pan head mounting post

 
🚫 Prohibition

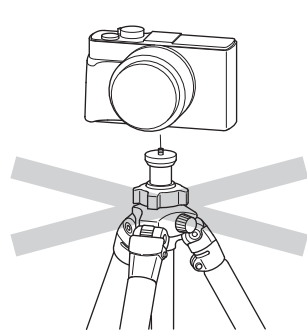

Do not attach camera directly to the threaded post of the center column. This may damage both of camera and tripod.


Setting up

 ⚠ Caution

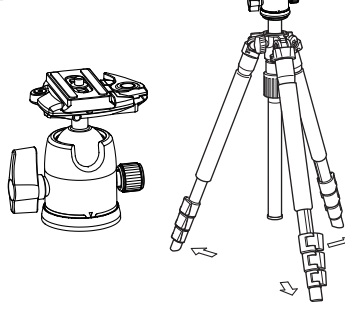

To prevent accidental equipment fall or tripod tipping over making sure all levers, knobs and handles on the tripod are securely tightened, and all three legs are opened all the way.

## Attaching the camera to the quick release shoe

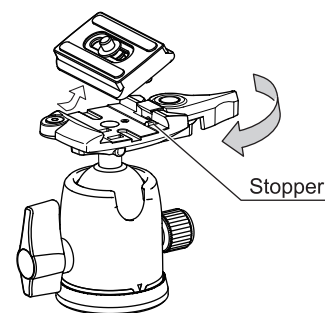 


(Back side)

Remove the quick release shoe.  
Do not put the lock lever back by force as it has been stood by the stopper.


Screw the camera mounting screw on the tripod attachment screw of your camera and fix firmly.

## ⚠ Caution

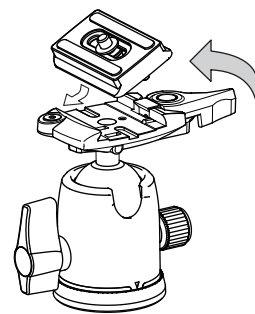 


To reattach the shoe, slide it in from the shoe lock lever side.  
If it attaches, the shoe lock lever closes automatically.  
Push the lock lever more to make sure the camera shoe is locked completely.

## Operation

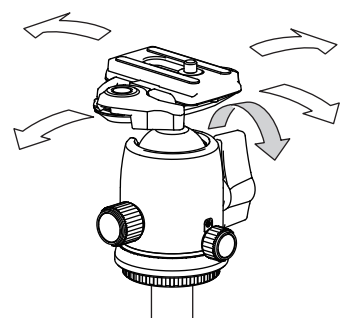 


 The platform can be moved freely while ball lock lever is loosened.  
Tighten the ball lock lever when a camera angle is determined.

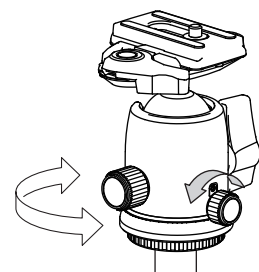


When the pan lock knob is loosened, the tripod head is rotated horizontally.

## Removing head from the center column

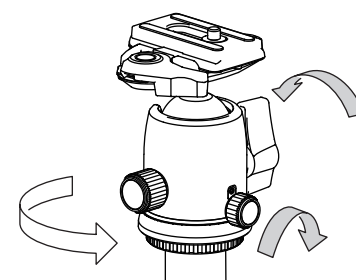 


Tighten the ball lock lever and pan lock knob.  
Turn the head counter-clockwise to loosen.

## How to attach a tripod column

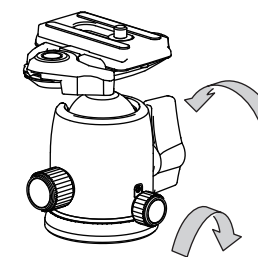 


 Tighten the ball lock lever and pan lock knob.  
When a tripod mounting screw is U3/8", screw in the double screw adaptor.

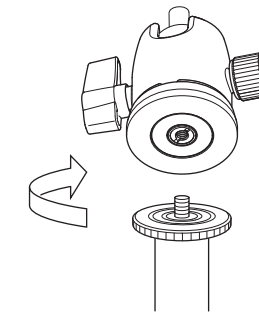


Set to the pan head attachment screw, and turn the head clockwise and fasten firmly.

## Three position adjustable legs

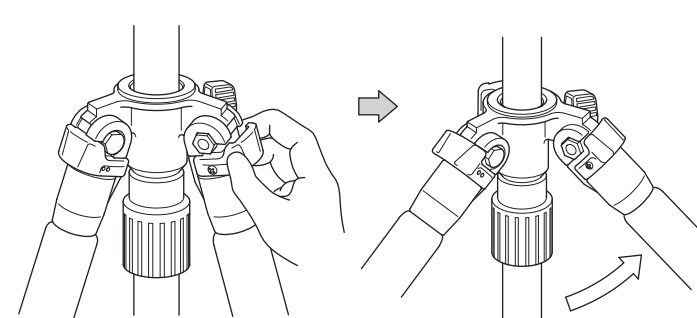 


To change the angle of each leg, close the leg slightly and then pull the leg angle adjustment lock out.  
There is a choice of two other angle positions.

## ⚠ Caution

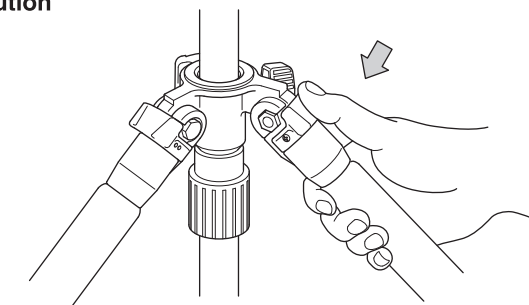 


After choosing the desired leg angle, securely push in the adjustment lock.

## Extending the tripod legs

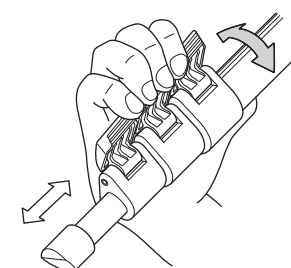 


Flip up the leg lock lever to extend or shorten any of the individual leg sections to the desired length.  
Press the leg lock lever flush against the leg to lock.

## How to get low position shots

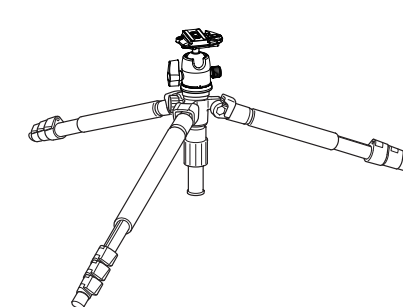 


 You can get lower height as shown in the picture.

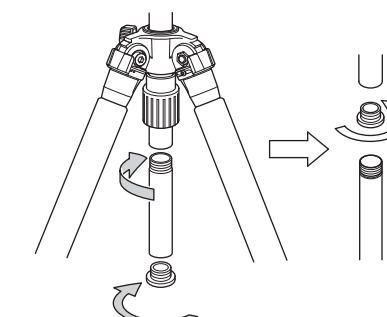


Remove the center column base stopper.  
Then remove the lower part of center column.  
Put the center column base stopper in to the upper part of center column.

## ⚠ Caution

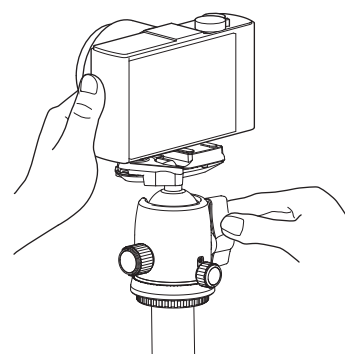 


To loosen the ball lock lever with a camera on can result an unexpected fall.  
Hold a camera firmly until the ball lock lever is tightened.

## Bubble level

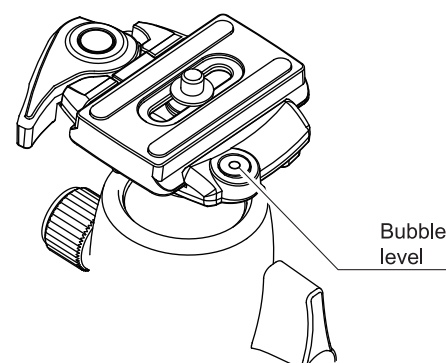 


Adjust the bubble level to fit into center.  
The bubble level is a rough criterion. It is not accurate as a leveler on a camera.

## Operating the center column

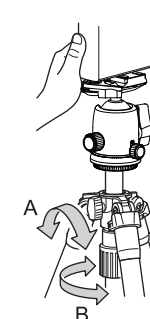 

 A - Screw-type  
Center column stopper is used to lock or unlock center column.  
B - Twist-type  
Center column locking nut is used to adjust a tension of the movement.  
The both of A and B must be locked for fixing center column.

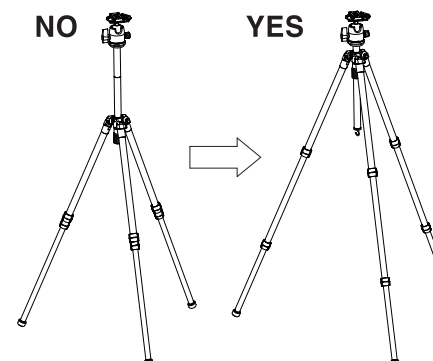

To avoid unnecessary camera vibrations, try to keep the center column height to a minimum.  
Also use the larger legs first when extending the legs.