

SLIK® PBH-52LP

Operating Instructions

Thank you very much for choosing SLIK product.
SLIK Corporation has designed to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.
Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of many fine features.
Retain this operating instruction in case you might want to refer back to it.

Specification

Height	100mm (4 in)
Weight	630g (1.39 lbs)

⚠ Caution



This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition

This prohibited icon refers to information pertaining to prohibited contents.
Please refer to instructions closely to avoid accidents.

V528

Components

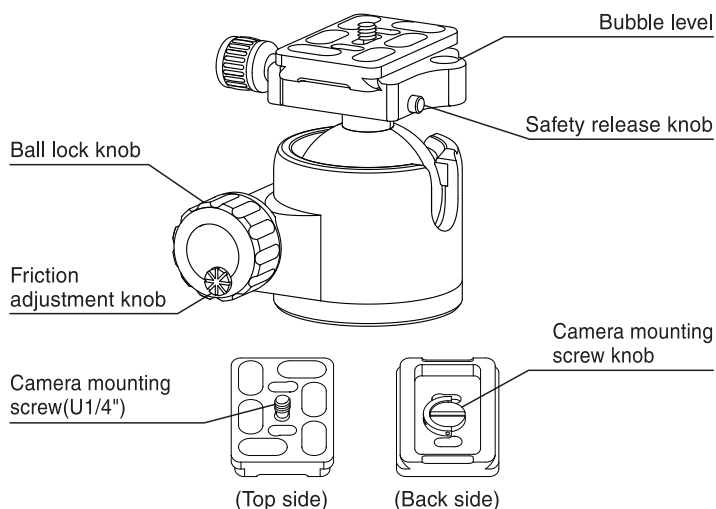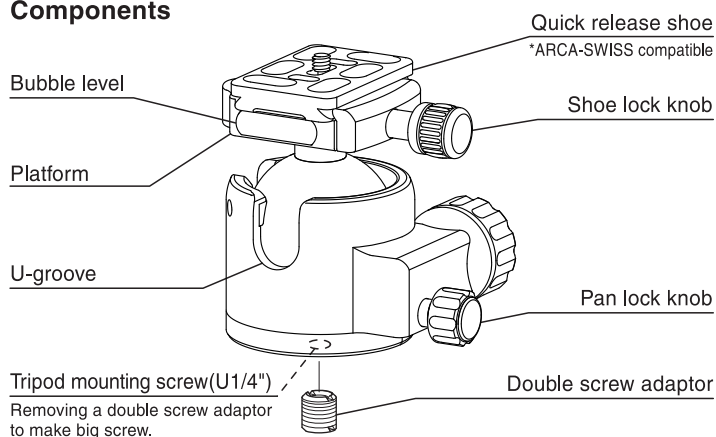

※Bubble level is a rough criterion.
It is not accurate as a leveler on a camera.

Equipment that can be loaded on this product


🚫 Prohibition

Maximum loading capacity
30 kgs (66.13 lbs)

Do not overload.
This product has been designed to handle equipment weighing under the maximum loading capacity. Some equipments weighing under the maximum loading capacity may not balance well due to its weight distribution. Use a larger equipment in such case.

Carrying the tripod


🚫 Prohibition

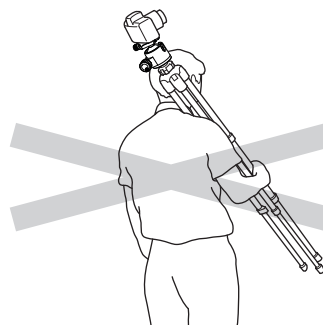

Carrying a tripod with a camera left on can result in unexpected accidents.
We therefore, recommend you to remove your camera while carrying the tripod.


Setting up

⚠ Caution

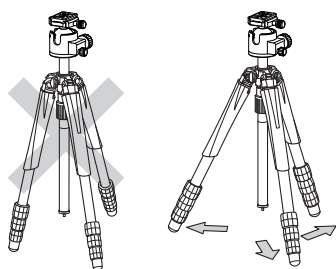


To prevent accidental equipment fall or tripod tipping over, making sure all levers, knobs and handles on the tripod are securely tightened.
And all of the three legs are opened all the way.

How to attach to tripod

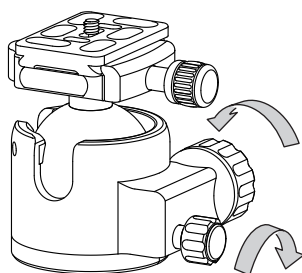


Tighten the ball lock knob and pan lock knob.
When a tripod mounting screw is U3/8", remove a double screw adaptor.

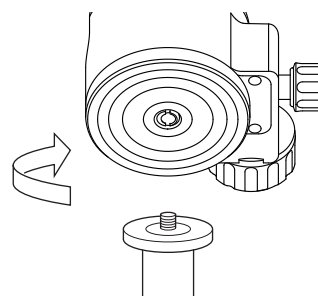


Fasten the ball lock knob and screw into a tripod mounting screw.

Removing the quick release shoe

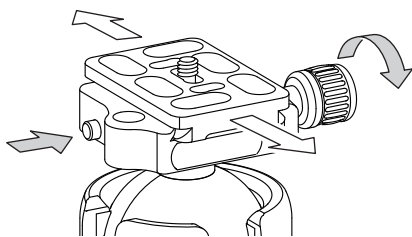


Loosen the shoe lock knob.
Slide out the quick release shoe from the platform while pushing the safety release knob.

Attaching a camera

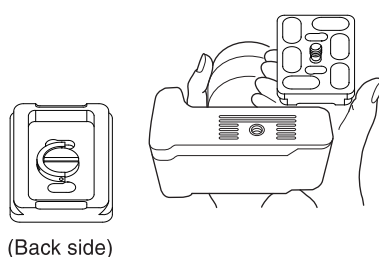


Screw the camera mounting screw on the tripod attachment screw of your camera and fix firmly.

Bubble level

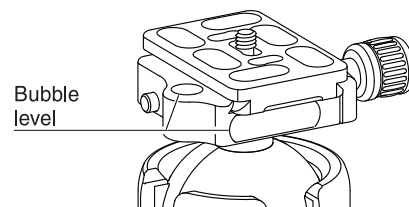


Adjust the bubble level to fit into center.
The bubble level is a rough criterion.
It is not accurate as a leveler on a camera.


Operation

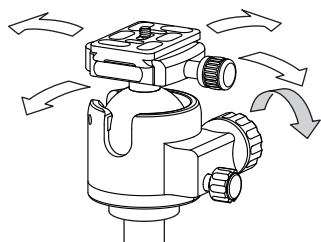

The platform can be moved freely while ball lock knob is loosened.
Tighten the ball lock knob when a camera angle is determined.

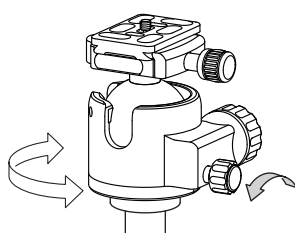


When the pan lock knob is loosened, the tripod head is rotated horizontally.

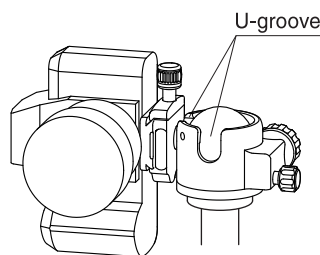

To set vertical camera position, place the platform into U-groove.



⚠ Caution

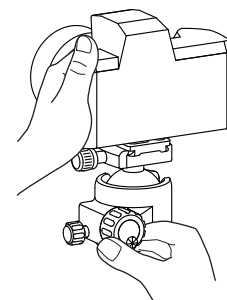

To loosen the ball lock knob with a camera on can result an unexpected fall.
Hold a camera firmly until the ball lock knob is tightened.

Ball friction adjustment

Ball lock knob

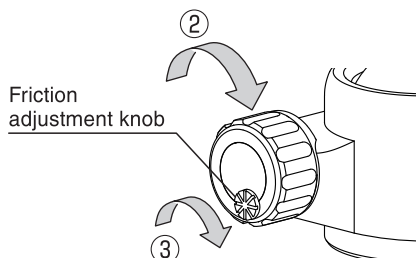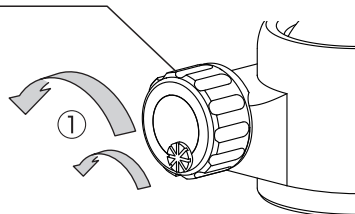


Friction adjustment knob

② Rotate ball lock knob (clockwise) until desired friction amount.
③ Rotate friction adjustment knob (clockwise) with thumb until it stop.
Friction adjustment knob will limit the rotation angle for the ball lock knob and always provide preset amount of damping force.

⚠ Caution

(Do not overturn friction adjustment knob, it will be the cause of product failure.)

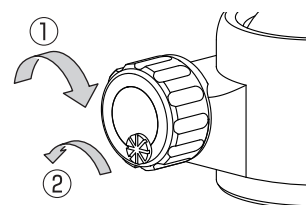


Friction adjustment provides an adequate amount of damping force for the ball movement, providing smooth camera movement and prevent sudden camera fall when loosening the ball lock knob.
① Loosen friction adjustment knob and ball lock knob (counterclockwise) while holding the camera securely with other hand.

Please take following procedure to re-adjust the amount of damping force.
① Rotate ball lock knob clockwise slightly.
② Rotate friction adjustment knob counterclockwise until it stop.

Care of the product

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.

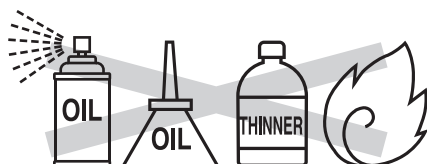

Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.

SLIK CORPORATION

853 Kayama, Hidaka City, Saitama 350-1231 Japan Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2020