

# PRO 923CF / PRO 924CF

#### **Operating Instructions**

Thank you very much for choosing SLIK Carbon Fiber tripod. SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Tripod's many fine features.

Retain this operating instruction in case you might want to refer back to it.

procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

#### (N) Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

### **Specification**

**PRO 923CF** 

Folded length 708 mm

(28")

Max. operating height 1.900 mm  $(74 \ 3/4")$ 

Max. center column ext. 310mm

(12 1/6")

Weight 2.32kg (5lbs 2oz)

PRO 924CF

Folded length 554 mm

(22")

Max. operating height 1,790 mm

 $(70 \ 1/3")$ 

Max. center column ext. 310mm

(12 1/6")Weight 2.31ka

# (5lbs 2oz)

This product has been designed to handle equipment weighing

Some equipments weighing under



Do not áttach a camera directly to the Pan head attachment screw

This may damage both your camera

## Equipment that can be loaded on this Tripod

Prohibition

overload.

under 10 kgs (22 lbs). Do not

10 kgs (22 lbs), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger tripod.

#### **Pan Head Attachment** Screw

#### Prohibition



of the Center column.

and tripod.

This caution icon refers to information pertaining to important safety

M302


# Components Pan head attachment screw (3/8") Center column plate Center column 3-Position leg angle adjustment lock Crank handle Center column stopper Center column tension Main body adjustment tube Soft grip Base plate Leg lock nut Pan head attachment screw (1/4") **PRO 923CF** 2-way Leg tips Accessory Allen wrench ≡⊈ਂ (2mm width)

# SPIKE SET

**Optional Accessory** 

Cat. NO. 618-410


**PRO 924CF** 



#### Caution

Soft Grip is consumption and cannot be used permanently. Please replace it whenever ragged.

# **Carrying the Tripod** Prohibition

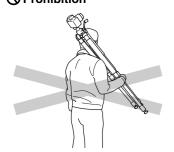

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.


## In case of the shock given to Tripod by force

Caution

When the shock has been given to the tripods &/or legs such as falling down please check well whether there are cracks, flaws, etc. on the pipes, or not. When you find any cracks, flaws, etc. on the pipes, please stop to use it and ask to repair. It may be wounded when some of fibers came out from the pipes. In that case, please do not touch it.


## Clamp Head

Prohibition

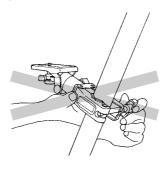

Please do not use an optional Clamp Head for a carbon fiber tripod. The pipe may be damaged.

# Three position adjustable




To change the angle of each leg, close the Leg slightly, and then pull the Leg angle adjustment lock

There is a choice of two other angle positions. After choosing the desired leg angle, securely push in the Adjustment lock.


#### **Elevating the Center column**



The Center column (elevator) will be going up and down, if the Center column stopper is loosened and the Crank handle is turned.




Please tighten the Center column stopper before lifting your hand from the Crank handle. Unexpected fall of the Center column can be prevented.

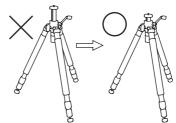


Please use the Crank handle of the Center column in the height to about 2/3 as the maximum. If not, it may cause unwanted camera movement.

# Adjusting elevation tension

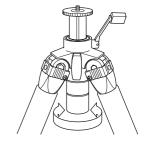


The tension of the Center column can be adjusted by turning the Center column tension adjustment tube.

# How to change the Panhead attachment screw to small size




Prepare an attached Allen wrench. When you want to change to U1/4 screw, please remove the Center column plate and then, loosen the fixing screw with a Allen wrench (2 mm width).


### Using a Short center column

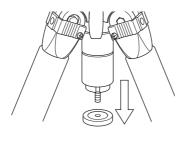

- Remove the lower Base plate .
  Loosen the Center column
- Loosen the Center column tension adjustment tube three or four complete turns.



- Using the Crank handle, crank out the Center column, while holding on to the head.
- 4. Remove the lower Base plate from the Short center column.



- Match the Groove of the Long center column to the Key guide inside the body of the tripod. Check to be sure this is perfectly matched.
- Turn the Crank handle to engage the gear on the Long center column. Check to be sure operation is smooth. Replace the Base plate.


## How to reattach the "FAJ ring"



In case, the FAJ ring was detached from Center column during the process of exchanging Center column, reattach is as per following steps.

- Loosen Center column tension adjustment tube by rotating counterclockwise, and pull it out to downward.
- Unite the Key of FAJ ring with the Groove of Center column, and insert it into Center column from thinner end.
- 3. Replace Center column tension adjustment tube by rotating clockwise.

### **Extending the Tripod legs**

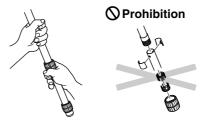


When you extend the legs, please proceed from the upper section.

When you fold the legs, please proceed from the lower section.

It will be steady to grip the upper part of pipe just above the Lock Nut.

Do not remove the nut and do not take to pieces. If it has been removed, insert it as per the above specification.

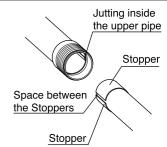

Match the space between the Stoppers and jutting inside the upper pipe when the pipe is connecting.

### How to change the leg tips



The leg tips can be converted to the spike leg tips. (sold separately) To remove the rubber leg tip, hold the leg pipe tightly and loosen the rubber leg tip.



Screw the spike leg tip into the leg pipe by finger tips until it comes stop. Then the spike leg tip must be tightened up with the wrench (comes with SPIKE SET).

### **○** Prohibition

If you hold the leg pipe other than the lowest part, the leg pipe may be damaged. Always use the attached wrench for the conversion. The pipe may be damaged.

## **Care of the Tripod**

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.